

THEHOOKCUPS.COM

LIMITED WARRANTY

Please visit our website for full details on our warranty terms and conditions, and for your customer support needs.

The descriptions and information contained in this document should be used for general reference only. The HookCups Group, Inc. written instructions are based on experience with our products and we strongly recommend thorough inspection and testing of the product prior to actual use.

The products described herein are subject to change and availability, and The HookCups Group, Inc. reserves the right to modify and/or withdraw the information set forth in this document. No claims, representations or warranties, whether express or implied, are made by The HookCups Group, Inc. as to the safety, reliability, durability, and performance of any of our products. The HookCups Group, Inc. accepts no liability whatsoever for the safety, reliability, durability, and performance of any of our products.

In no event shall The HookCups Group, Inc. be cumulatively liable to you for an amount greater than the amount paid by you for the product. Furthermore, The HookCups Group, Inc. does not accept liability for incidental or consequential damages, for any damages to property or bodily injury, or for any third-party claims for damages against the purchaser of this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this may not apply to you.

INSTALL

- 1 Align your boats parallel. Find a flat part of the hull near the back to place your first HookCup.
- 2 Place the end that is labeled #1 on your first boat. Apply strong pressure to the cups and push down levers to lock in place.
- 3 Firmly press the cups of the end labeled #2 on the second boat and lock in place. Your first HookCup has now connected both boats!
- 4 Place your second HookCup near the midpoint of the boats, or about 10ft (3m) from the first HookCup. Ensure that the end labeled #1 is on boat 1 and end #2 is on boat 2 to match your first HookCup.

Ideal Placement



CONNECT YOUR BOAT & FLOAT



TIP! Use a third HookCup for boats longer than 30ft (9m). Do not place cups on decals or boat stickers.

UNINSTALL: Lift the levers up on all cups to disconnect. Before putting away, ensure your HookCups™ are clean and dry with the cups folded inward.

 


HOOKCUPS™

ENGLISH INSTRUCTIONS

ASSEMBLE

BAR ×2

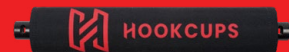

PIN ×4



#1 CIRCLE CONNECTOR ×2



#2 OVAL CONNECTOR ×2



Insert one end of the bar into a **#1 circle** connector, and the other end of the bar into a **#2 oval** connector, making sure to align the pin holes.



Make sure **each** HookCup has an end labeled #1, and an end labeled #2.

Insert the pin through the bar and connector, and wrap the metal loop around the connector, latching over the bottom of the pin.

